

# How to update firmware through PC

**You will learn how to update EZCast Band1's firmware with our PC tools through the following methods.**

The tool you may need:




1. Micro USB cable (Prepared by user): To connect EZCast Band 1 dongle with your PC.
2. A Windows PC, running Win 7 or above.

Please follow the methods to update FW.


**Step 1: Download EZCast Repair Tool to your Windows PC (at the bottom of this page).**

Uncompressed the downloaded file and unfold the usb\_driver, click “install” to install EZCast repair tool.

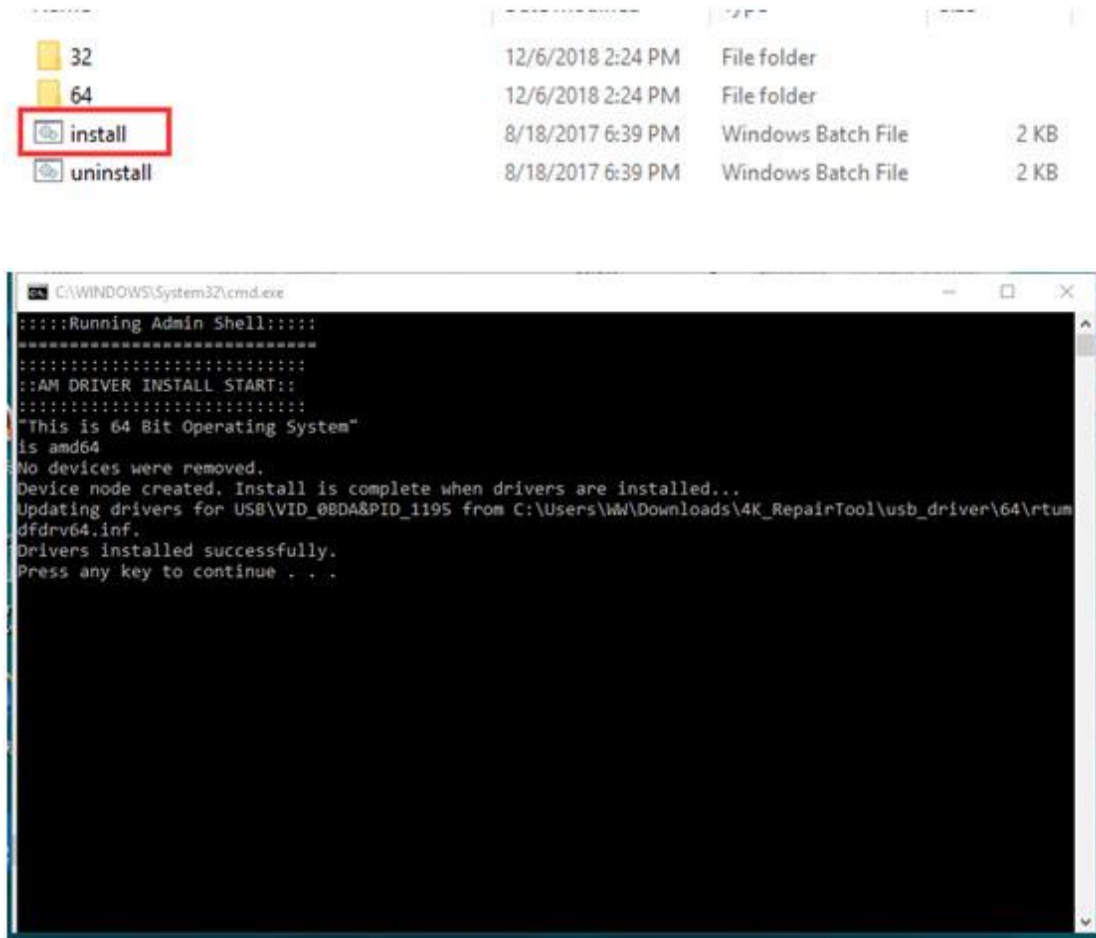

After installing the driver, please double click the “EZCastUpdate” file.

for_usb_mp_tool	2018/11/6 19:18	文件夹	
goddr	2019/10/30 15:29	文件夹	
usb_driver	2019/10/30 16:53	文件夹	
<b>EZCastUpdate</b>	2019/10/30 11:53	应用程序	2,601 KB
ota_module	2019/10/30 16:23	文件	1 KB

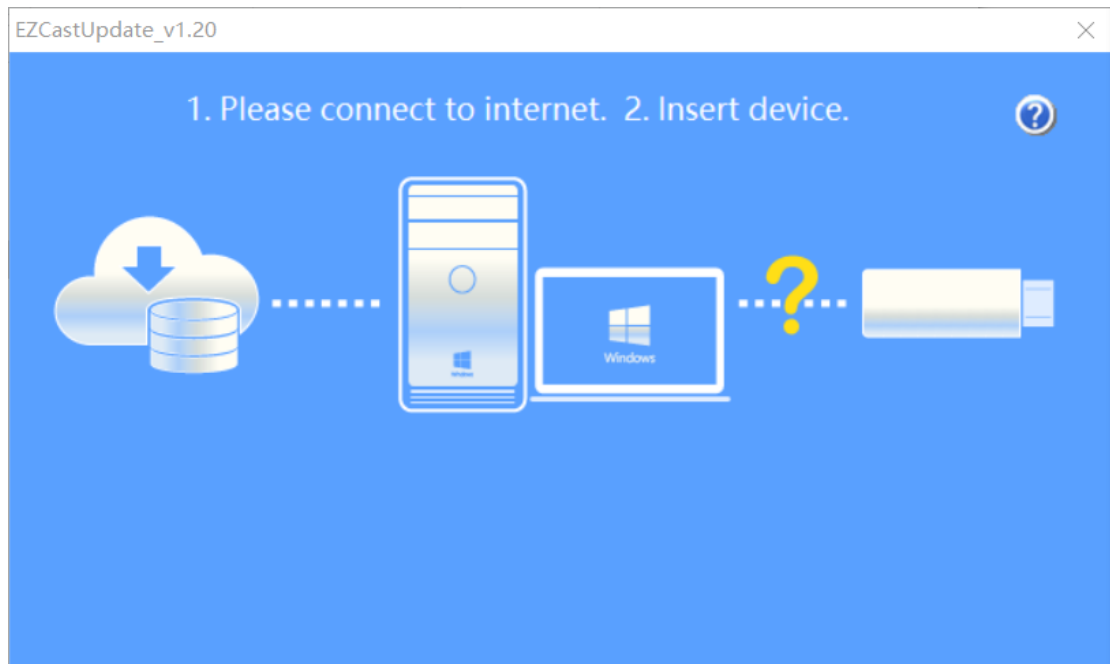

## Step 2. Enter update mode

Connect micro USB port to EZCast Band1, press and hold the reset button while plugging the USB cable to PC (please keep holding Reset button) at the same time. You may need to wait for 3~5 seconds for PC to recognize the USB device. (Note: The Reset button is located on the side of the Band1, you may feel a click when you press it)




\* The reset button location




PC displays the following screen to indicate the device is found and connected to the PC, and then you can release the reset button for the next step.

### **Step 3. Update firmware**


Click “Upgrade”, you will see following figure to show FW Download progress.

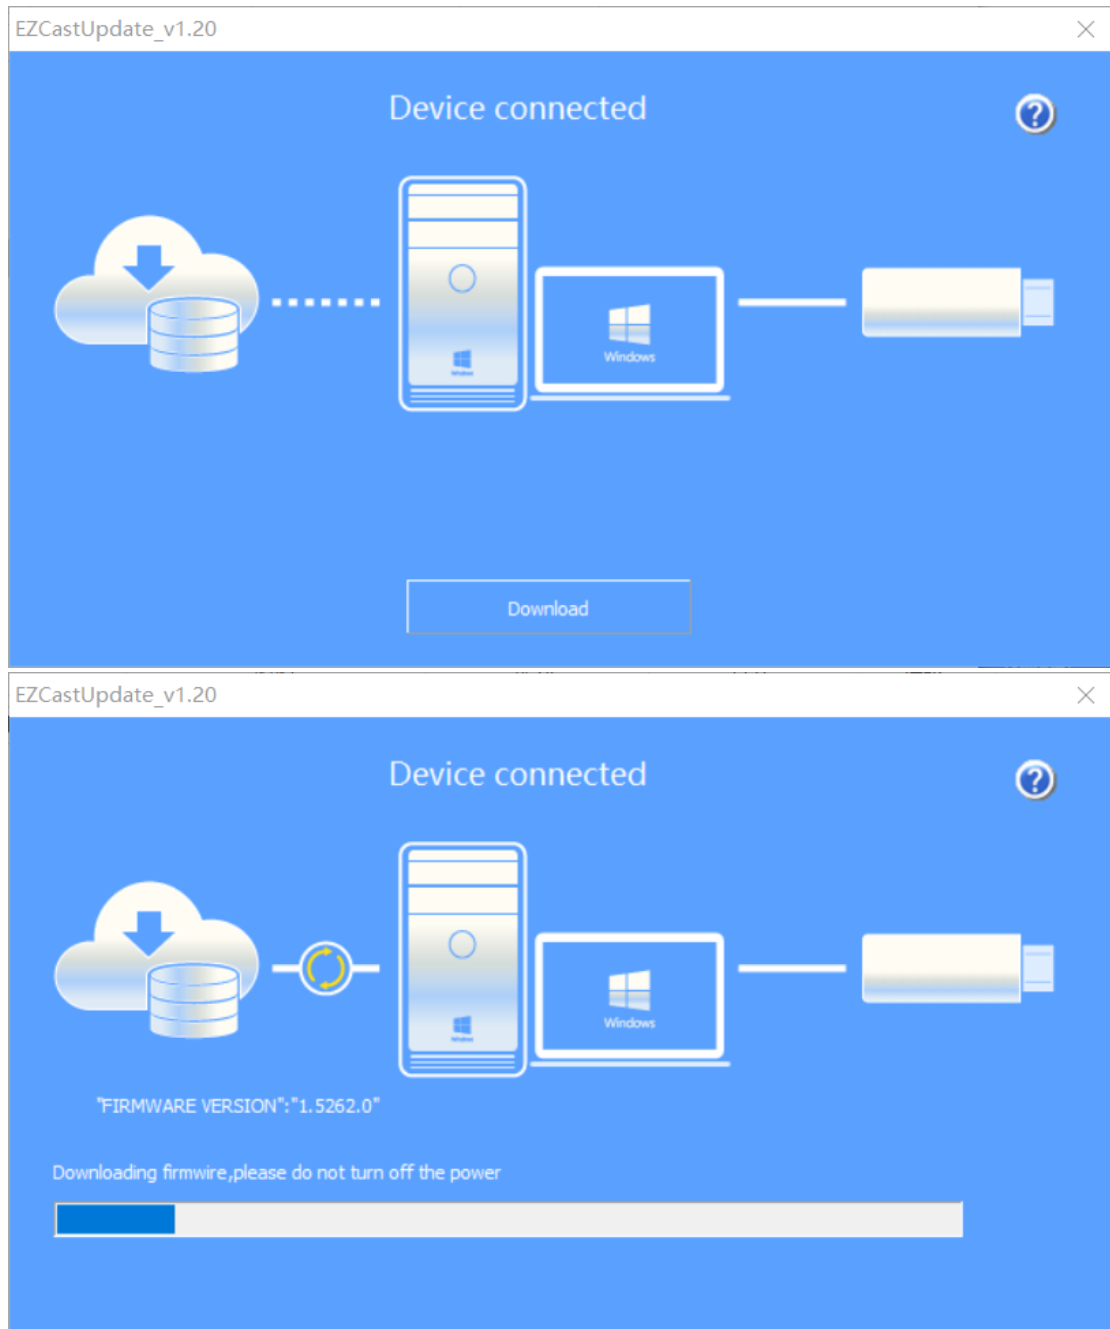

As a reminder, make sure your PC is connected to the Internet. After the FW is downloaded, the button will change to “Upgrade”, now you can update the FW.

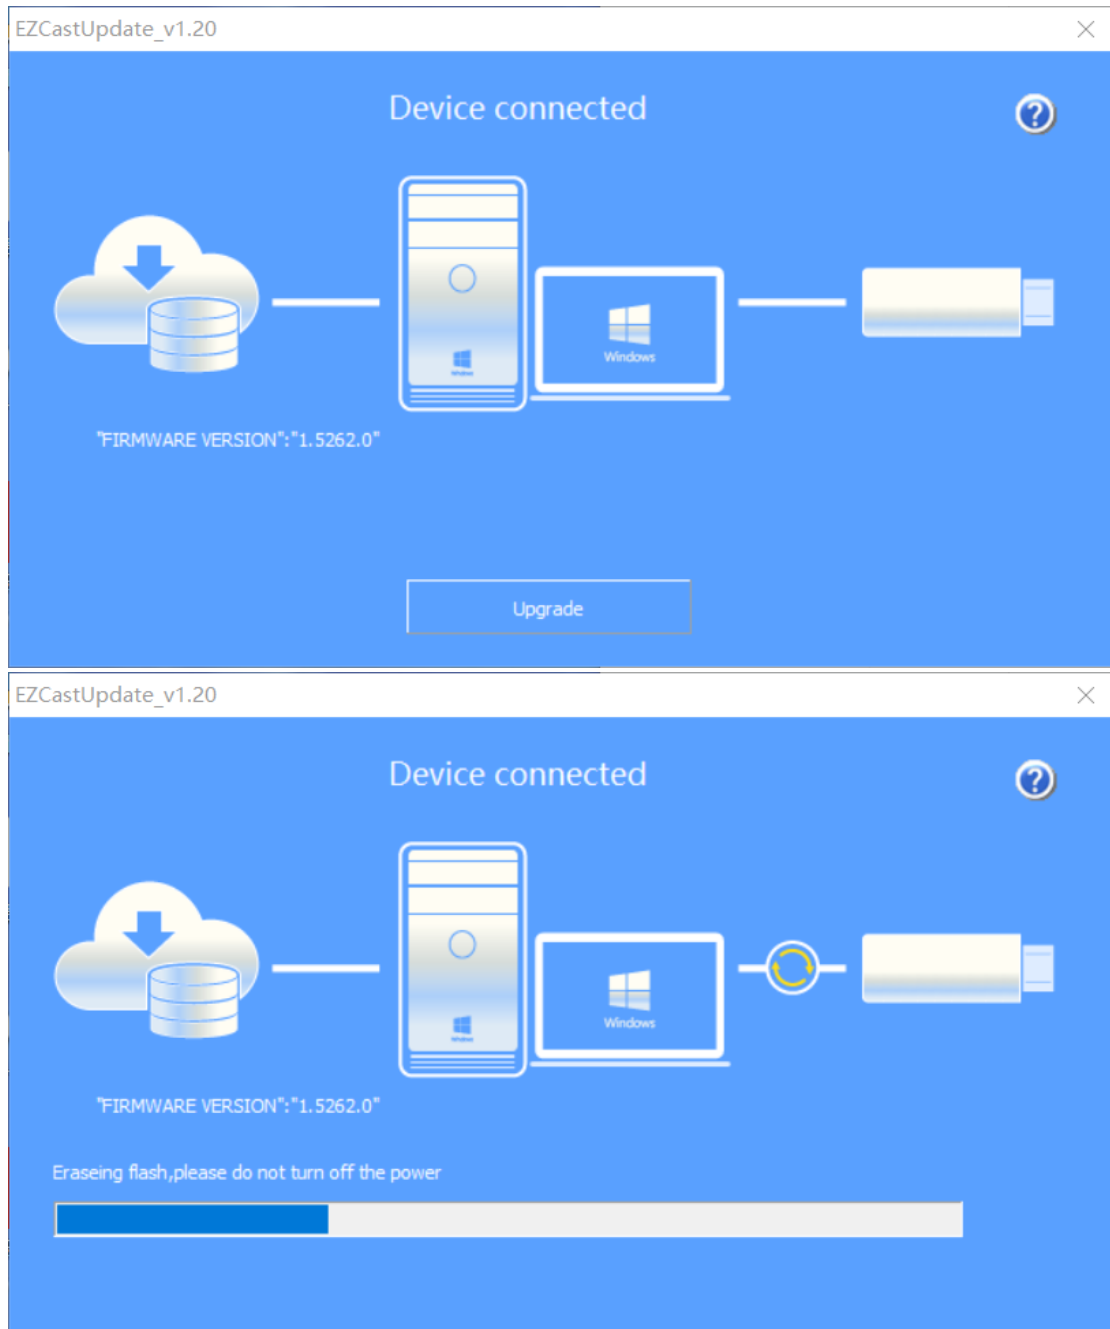

**Note: If the app shows a question mark, please unplug and re-plug USB cable and it will continue the update.**

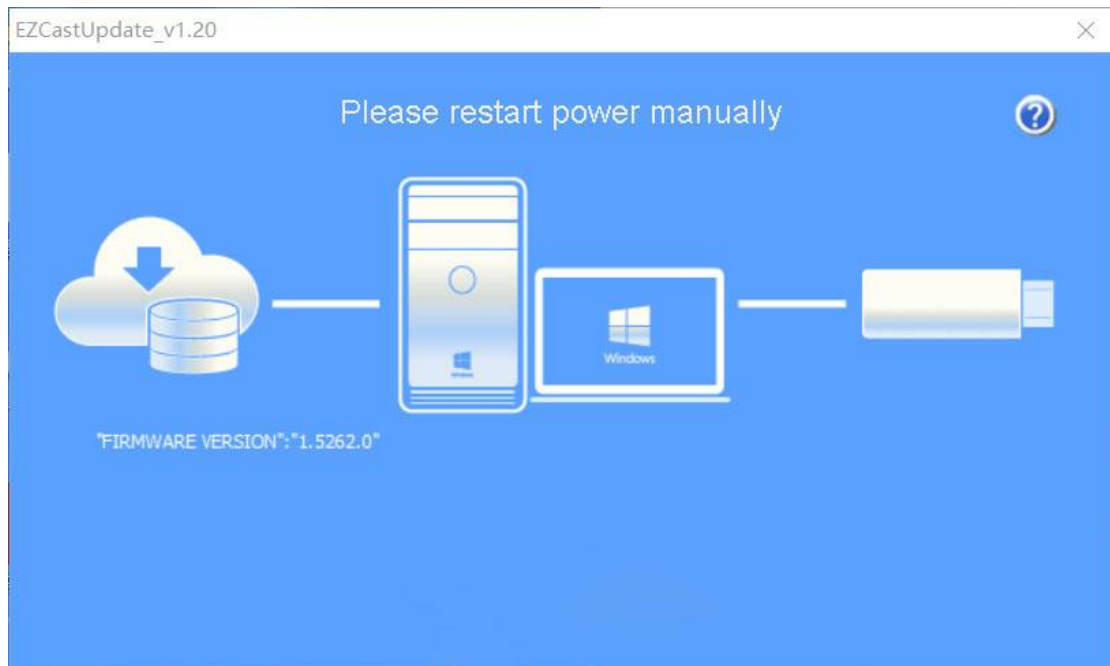

The FW is successfully updated when you see the following message.

