

How to update firmware through PC

You will learn how to update EZCast Docking Station's firmware with our PC tools through following methods.

The tool you may need:



1. Micro USB cable: To connect EZCast Docking Station with your PC.
2. A Windows PC, running Win 7 or above.

 
 
3. A paper pin: To push the reset button.

Please follow the methods to update FW.


Step 1: Download EZCast Repair Tool to your Windows PC (at the bottom of this page).

Uncompressed the downloaded file and turn on ADFU_Driver file.

Double click the “Setup_Driver” file to install the driver.

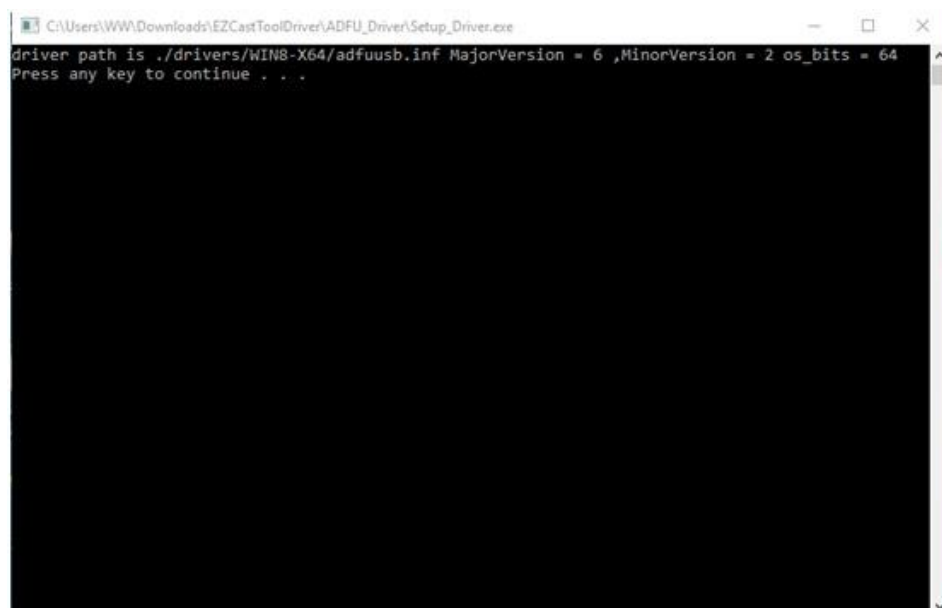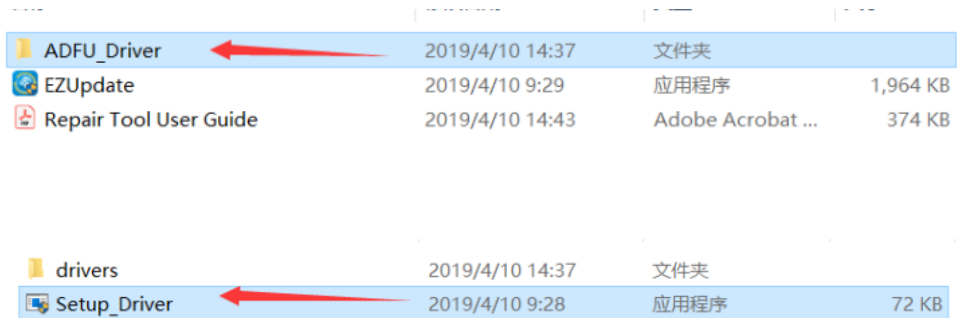

 After installing the driver, please double click the “EZCastUpdate” file.

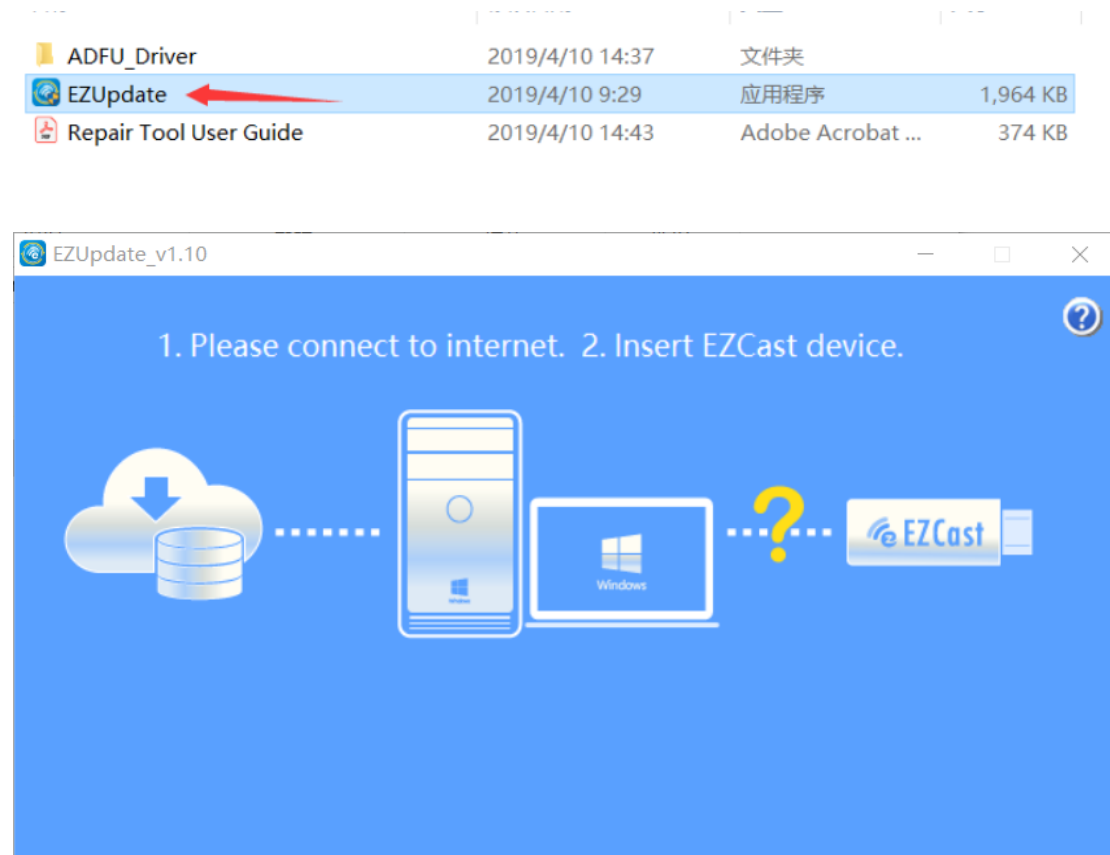

Step 2. Enter update mode

Connect micro USB port to EZCast Docking Station, use a paper pin to push and hold the reset button while plugging the USB cable to PC (please keep holding Reset button) at the same time. You may need to wait for 3~5 seconds for PC to recognize the USB device. (Note: the Reset button is located in the center of LED bar, you may feel a gentle click when you press it)



 
 
When the USB is connected to PC, the New Hardware Wizard will ask you to install driver, now you can let go the tweezers

 
**the pop-up message will not be shown correctly if you didn't enter download mode successfully.*

Step 3. Update firmware

Click "Check Version", the tool will start to compare the FW version between dongle and our cloud server. If the tool shows "No Version Info", you can ignore it and keep upgrading the FW.

**please be noted your PC must connect to internet first.*

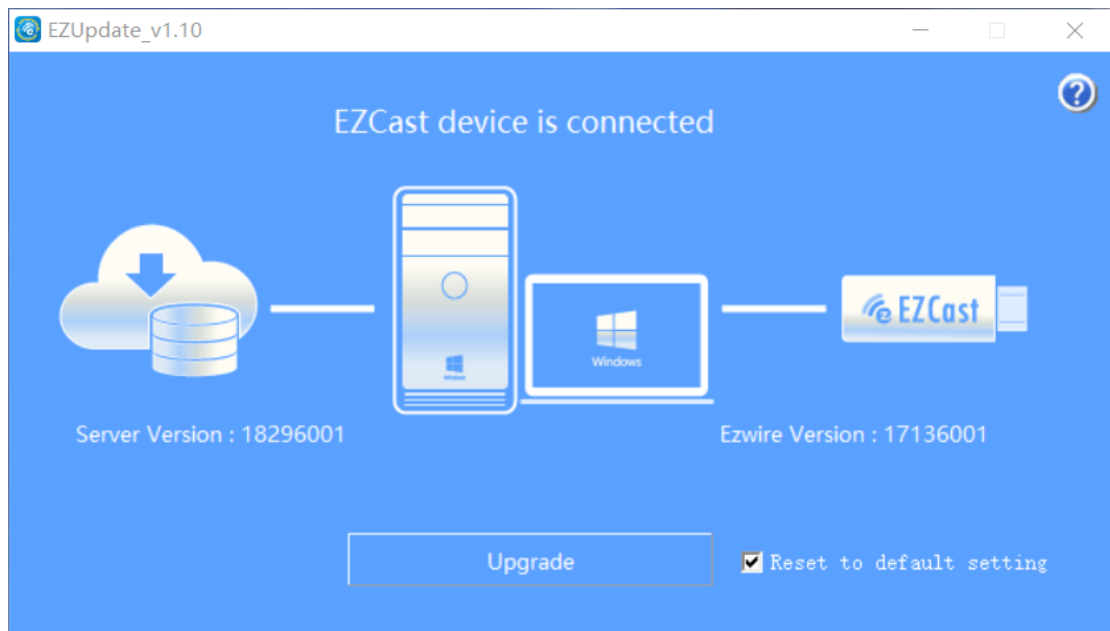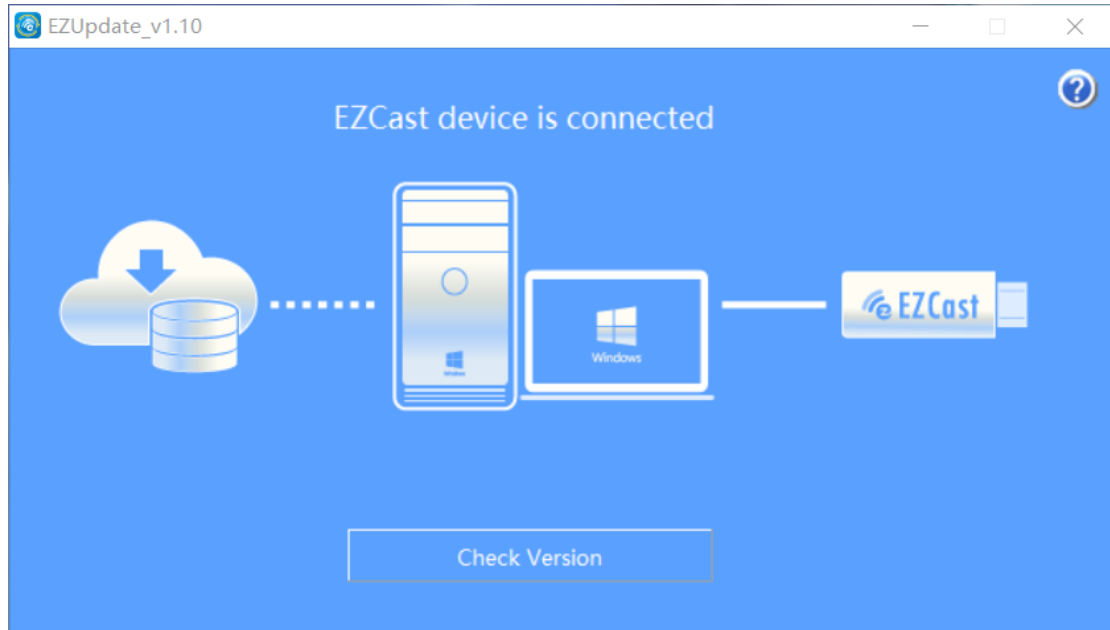

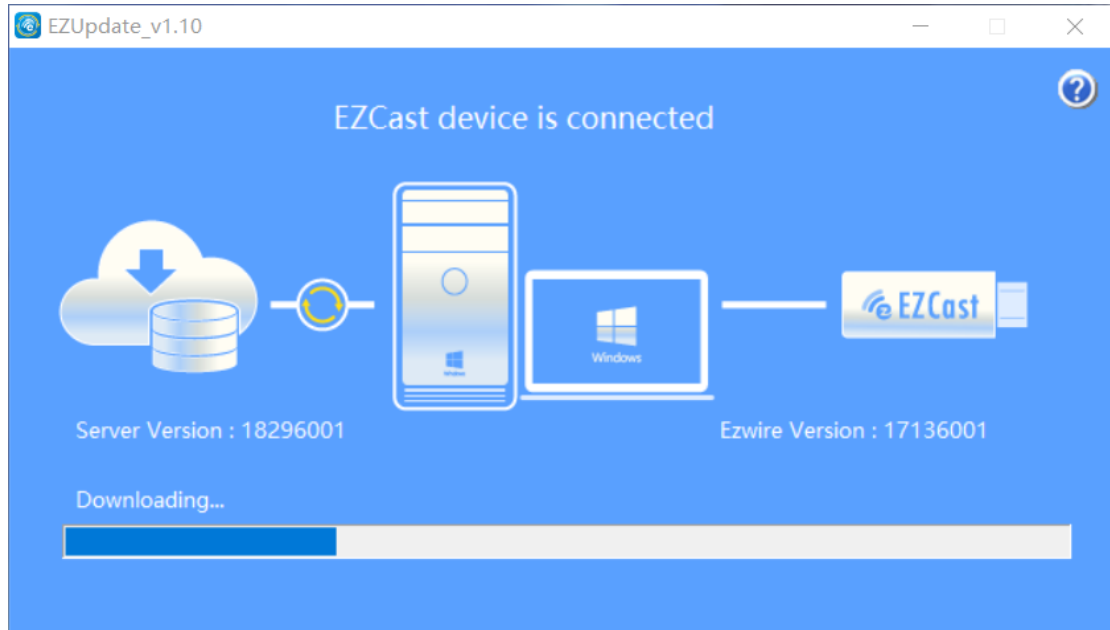

The FW is successfully updated when you see the following message.

After the update is done, please unplug the dongle and connect to TV to enjoy latest FW version!

